晶采光電科技股份有限公司 AMPIRE CO., LTD.

SPECIFICATIONS FOR LCD MODULE

CUSTOMER	
CUSTOMER PART NO.	
AMPIRE PART NO.	AM-800480RPTMQW-T01H
APPROVED BY	
DATE	

☑Approved For Specifications

□Approved For Specifications & Sample

AMPIRE CO., LTD.

4F., No.116, Sec. 1, Xintai 5th Rd., Xizhi Dist., New Taipei City 221, Taiwan (R.O.C.) 22181 新北市 汐止區新台五路一段 116 號 4F TEL:886-2-26967269, FAX:886-2-26967196 or 26967270

APPROVED BY	CHECKED BY	ORGANIZED BY

Date: 2013/11/28 AMPIRE CO., LTD.

1

RECORD OF REVISION

Revision Date	Page	Contents	Editor
2013/9/9		New Release.	Rober
2013/11/28	20	Modify OUTLINE DIMENSION.	Alan

1. INTRODUCTION

Ampire Display Module is a color active matrix TFT-LCD that uses amorphous silicon TFT as a switching device. This model is composed of a TFT-LCD panel, driving circuit, LCD Controller SSD1963, touch panel and touch panel controller TSC2046. This TFT-LCD has a high resolution (800(R.G.B) X 480) and can display up to 262,144 colors.

1-1. Features

• 7" WVGA (16:9 diagonal) configuration

• Input interface voltage: 3.3V

• Interface: 40 pin pitch 0.5mm connector

4-wire resistance touch panelBacklight supply voltage: 5.0V

1-2. LCD Controller Feature:

(1) MCU interface: i80/M68 series MCU interface (default: i80 series).

(2) Pixel data format: 8, 9, 16 and 18 bit.

(3) Display RAM size: Built-in 1215K bytes frame buffer. Support up to 864 x 480 at 24bpp display.

(4) Arbitrary display memory starts position selection.

(5) 16 bit interface support 65K (R5 G6 B5) Color.

2. PHYSICAL SPECIFICATIONS


Item	Specifications	unit
Display resolution(dot)	800RGB (W) x 480(H)	dots
Active area	152.4 (W) x 91.44 (H)	mm
Pixel pitch	0.1905 (W) x 0.1905 (H)	mm
Color configuration	R.G.B Vertical stripe	
Overall dimension	165.0(W) x 104.44(H) x 9.52 (T)	mm
Brightness	400 nit (typ)	cd/m ²
Contrast ratio	400 : 1	
Backlight unit	LED	
Display color	262,144	colors

3. ABSOLUTE MAX. RATINGS

Item	Symbol	Condition	Min.	Max.	Unit	Remark
Power voltage	VDD	VSS=0	-0.3	4.6	V	
Input voltage	Vin		-0.3	VDD+0.3	V	Note 1

Note1: /CS, /WR, /RD, RS, DB0~DB17

Block Diagram

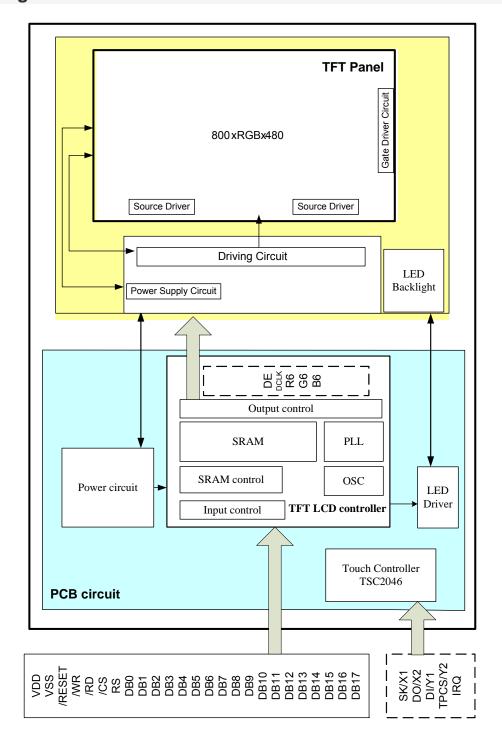

4. ELECTRICAL CHARACTERISTICS

4-1 DC Electrical characteristic of the LCD

ITEM		SYMBOL	MIN	TYP	MAX	UNIT	CONDITION
Power Supply Voltage For LCD		VDD	3.0	3.3	3.6	V	
Power S For LCD	upply Current	IDD	-	200	-	mA	Black pattern
	Input Voltage	V_{IN}	0	-	VDD	V	
Logic Input	Threshold Voltage(High)	V_{TH}	0.7VDD	-	VDD	V	
Voltage	Threshold Voltage(Low)	V_{TL}	0	-	0.3VDD	V	
Power Supply Voltage For LED driver		VLED	4.5	5.0	5.5	V	
Power S For LED	upply Current driver	ILED	-	480	-	mA	VLED=5V


Note 1: /CS,/WR,/RD,RS,DB0~DB17

Note 2: fV =60Hz , Ta=25°C , Display pattern : All Black

4-2 Electrical characteristic of LED Back-light


ITEM	SYMBOL	MIN	TYP	MAX	UNIT	CONDITION
LED Backlight Voltage	V_{BL}	ı	9.6	1	V	I _{BL} =180mA, reference only
LED Backlight Current	I _{BL}	-	180	-	mA	Ta=25°C
LED Life Time			40K		Hr	Note 1

Note 1: Brightness to be decreased to 50% of the initial value. Ta=25°C

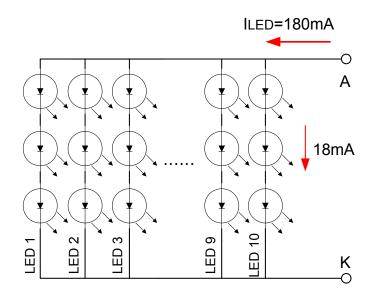

5

Note 2: The constant current source is needed for white LED back-light driving. should be adjusted to 135mA max

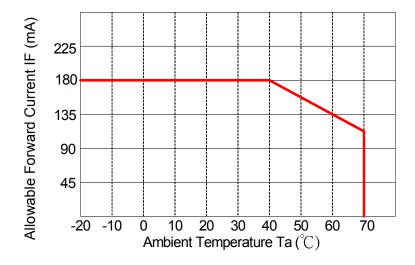

4-3 Touch Panel ELECTRICAL SPECIFICATION

Parameter	Condition	Standard Value		
Terminal Resistance	X Axis	200 ~ 900 Ω		
Terminal Resistance	Y Axis	160 ~ 640 Ω		
Insulating Resistance	DC 25 V	More than $20M\Omega$		
Linearity		≦1.5 %		
Notes life by Pen	Note a	100,000 times(min)		
Input life by finger	Note b	1,000,000 times (min)		

Note A.

Notes area for pen notes life test is 10 x 9 mm.

Size of word is 7.5 x 6.75 Shape of pen end: R0.8mm

Load: 250 g

Note B

By Silicon rubber tapping at same point


Shape of rubber end: R8mm

Load: 250gf Frequency: 5 Hz

Date: 2013/11/28

Interface

No.	Symbol	Function
1	Y2	Touch Panel Top Signal in Y Axis
2	X2	Touch Panel Right Signal in X Axis
3	Y1	Touch Panel Bottom Signal in Y Axis
4	X1	Touch Panel Left Signal in X Axis

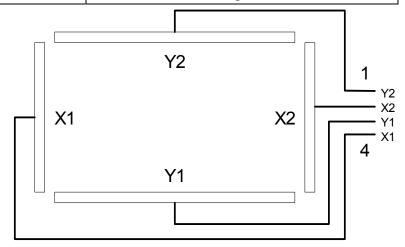

5. INTERFACE


Pin no	Symbol	I/O	Description	Remark
1	GND	_	GND	
2	GND	-	טאפ	
3	VLED	I	LED Power input (5V)	
4	VLED	ı	LED Power input (5V)	
5	/RESET	ı	Reset signal for TFT LCD controller.	
6	RS		Register and Data select for TFT LCD controller.	
7	/CS		Chip select low active signal for TFT LCD controller.	
8	/WR	ı	80mode: /WR low active signal for TFT LCD controller.	
			68mode: E signal latch on rising edge.	
9	/RD	I	80mode: /RD low active signal for TFT LCD controller. 68mode: R/W signal Hi: read, Lo: write.	
10	DB0	ı		
11	DB1	ı		
12	DB2	I		
13	DB3	ı		
14	DB4	ı		
15	DB5	ı		
16	DB6	ı		
17	DB7	ı		
18	DB8	I	Data bus.	
19	DB9	I	Data bus.	
20	DB10	ı		
21	DB11	I		
22	DB12			
23	DB13			
24	DB14	Ī		
25	DB15	Ī		
26	DB16	I		
27	DB17	I		
28	NC	-	No connection.	
29	GND	-	GND	
30	SK		TSC2046 SPI serial clock input	
31	DO	-	TSC2046 SPI serial data output.	
32	DI	-	TSC2046 SPI serial data input.	
33	TPCS	-	TSC2046 Chip Select signal. Active low.	
34	IRQ	-	TSC2046 Pen interrupt.	
35-37	VDD	-	Power supply for the logic (3.3V).	
38-40	GND	-	GND.	

6. OPTICAL CHARACTERISTICS

Item		Symbol	Condition	Min.	Тур.	Max.	Unit	Note	
	Front	θf		55	60				
Viewing	Back	θЬ	CD > 10	55	60		al a a	(4)(2)(2)	
Angle	Left	θΙ	CR≧10	65	70		deg.	(1)(2)(3)	
	Right	θr		65	70				
Contrast ratio		CR	Θ=Φ=0°	250	400			(1)(3)	
Response Tin	20	T _r			5	10	ms	(1)(4)	
Response in	iie	T_f	Θ=Φ=0°		11	16	ms	(1)(4)	
Color	White	Wx	Θ-Ψ-0	0.239	0.299	0.359		(1)	
chromaticity	vviile	Wy		0.268	0.328	0.388		(1)	
Luminance		L	Θ=Φ=0°	320	400		cd/m²	(1)(5)	
Luminance Uniformity		ΔL	Θ=Φ=0°	70			%	(1)(5)(6)	

Note 1: Ta=25°C. To be measured on the center area of panel after 10 minutes operation.

Note 2: Definition of Viewing Angle

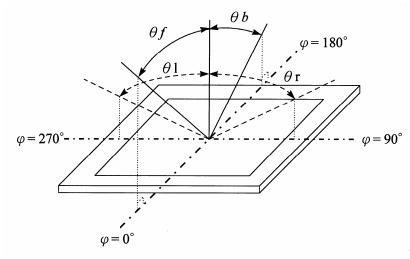


Note 3: Definition of contrast ratio:

Contrast ratio is calculated with the following formula.


Contrast ratio(CR)= Photo detector output when LCD is at "White" state
Photo detector Output when LCD is at "Black" state

Note 4: Definition of response time:

The output signals of photo detector are measured when the input signals are changed from "black" to "white" (falling time) and from "white" to "black" (rising time) respectively. The response time is defined as the time interval between the 10% and 90% of amplitudes. Refer to figure as below.

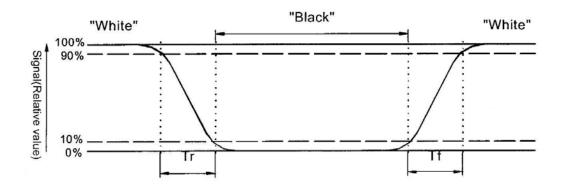

Note 5: Luminance is measured at point 5 of the display.

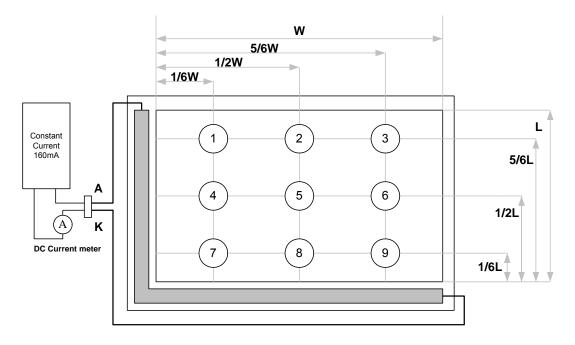


Note 6: Definition of Luminance Uniformity

 $\Delta L = [L(min.) \text{ of 9 points} / L(max.) \text{ of 9 points}] \times 100\%$


7. Interface Protocol

7.1 M68 Series

Symbol	Parameter	Min	Тур	Max	Unit
$t_{\rm cyc}$	Reference Clock Cycle Time	9	-	-	ns
$t_{ m PWCSL}$	Pulse width CS# or E low	1	-	-	t_{CYC}
$t_{ m PWCSH}$	Pulse width CS# or E high	1	-	-	t_{CYC}
$t_{ m FDRD}$	First Data Read Delay	5	-	-	t_{CYC}
$t_{ m AS}$	Address Setup Time	1	-	-	ns
t_{AH}	Address Hold Time	1	-	-	ns
$t_{ m DSW}$	Data Setup Time	4	-	-	ns
$t_{ m DHW}$	Data Hold Time	1	-	-	ns
$t_{ m DSR}$	Data Access Time	-	-	5	ns
$t_{ m DHR}$	Output Hold time	1	-	-	ns

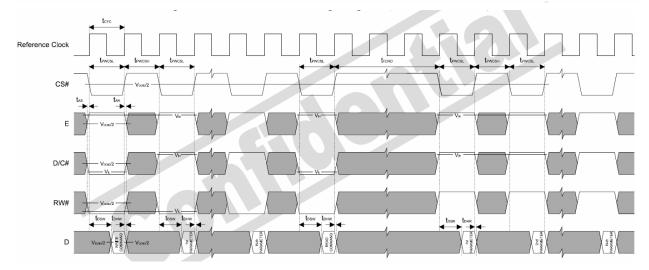


6800 Mode Timing Diagram (Use CS# as Clock)

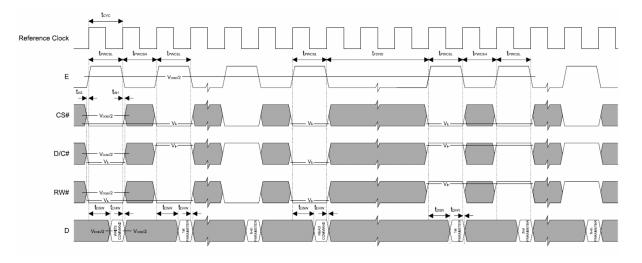

6800 Mode Timing Diagram (Use E as Clock)

7.2 i80 Series

Symbol	Parameter	Min	Тур	Max	Unit
t _{cyc}	Reference Clock Cycle Time	9	-	-	ns
$t_{ m PWCSL}$	Pulse width CS# low	1	-	-	t_{CYC}
t _{PWCSH}	Pulse width CS# high	1	-	-	t_{CYC}
$t_{ m FDRD}$	First Read Data Delay	5	-	-	t_{CYC}
t_{AS}	Address Setup Time	1	-	-	ns
t_{AH}	Address Hold Time	1	-	-	ns
$t_{ m DSW}$	Data Setup Time	4	-	-	ns
$t_{ m DHW}$	Data Hold Time	1	-	-	ns
$t_{\rm DSR}$	Data Access Time	-	-	5	ns
$t_{ m DHR}$	Output Hold time	1	-	-	ns

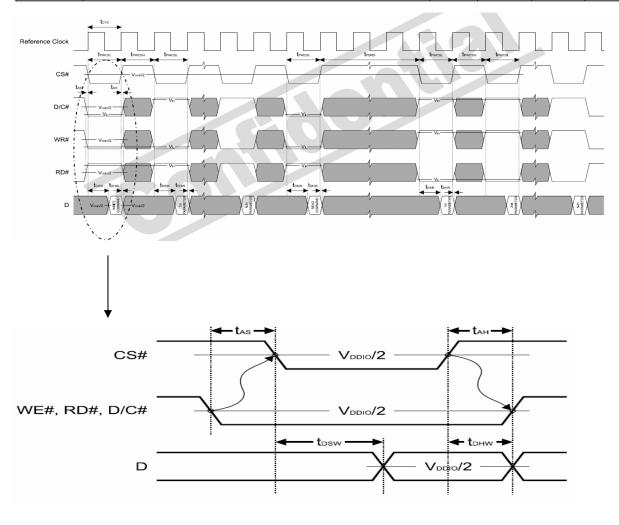

7.3 Data transfer order Setting

Interface	Cycle	D[23]	D[22]	D[21]	D[20]	D[19]	D[18]	D[17]	D[16]	D[15]	D[14]	D[13]	D[12]	D[11]	D[10]	D[9]	D[8]	D[7]	D[6]	D[5]	D[4]	D[3]	D[2]	D[1]	D[0]
24 bits	1 st	R7	R6	R5	R4	R3	R2	R1	R0	G7	G6	G5	G4	G3	G2	G1	G0	B7	B6	B5	B4	B3	B2	B1	B0
18 bits	1 st							R5	R4	R3	R2	R1	R0	G5	G4	G3	G2	G1	G0	B5	B4	В3	B2	B1	B0
16 bits (565 format)	1 st									R5	R4	R3	R2	R1	G5	G4	G3	G2	G1	G0	B5	B4	B3	B2	B1
	1 st									R5	R4	R3	R2	R1	R0	Х	Х	G5	G4	G3	G2	G1	G0	Х	Х
16 bits	2 nd									B5	B4	В3	B2	B1	B0	Х	Х	R5	R4	R3	R2	R1	R0	Х	Х
	3 rd									G5	G4	G3	G2	G1	G0	Х	Х	B5	B4	B3	B2	B1	B0	Х	Х
9 bits	1 st																R5	R4	R3	R2	R1	R0	G5	G4	G3
0 210	2 nd																G2	G1	G0	B5	B4	В3	B2	B1	В0
	1 st																	R5	R4	R3	R2	R1	R0	Х	Х
8 bits	2 nd																	G5	G4	G3	G2	G1	G0	Х	Х
	3 rd																	B5	B4	B3	B2	B1	B0	Х	Х
Y: Don't Care	۷.																								

8. Command Table

Hex Code	Command	Description
0x 00	nop	No operation
0x 01	soft reset	Software Reset
0x 0A	get_power_mode	Get the current power mode
0x 0B	get_address_mode	Get the frame memory to the display panel read order
0x 0C	get_pixel_format	Get the current pixel format
0x 0D	get_display_mode	The display module returns the Display Signal Mode.
0x 0E	get_signal_mode	Get the current display mode from the peripheral
0x 10	enter_sleep_mode	Turn off the panel.
		This command will pull low the GPIO0. If GPIO0 is configured as normal GPIO or LCD miscellaneous signal with command set_gpio_conf, this command will be ignored.
0x 11	exit_sleep_mode	Turn on the panel. This command will pull high the GPIO0. If GPIO0 is configured as normal GPIO or LCD miscellaneous signal with command set_gpio_conf, this command will be ignored.
0x 12	enter_partial_mode	Part of the display area is used for image display.
0x 13	enter_normal_mode	The whole display area is used for image display.
0x 20	exit_invert_mode	Displayed image colors are not inverted.
0x 21	enter_invert_mode	Displayed image colors are inverted.
0x 26	set_gamma_curve	Selects the gamma curve used by the display device.
0x 28	set_display_off	Blanks the display device.
0x 29	set_display_on	Show the image on the display device.
0x 2A	set_column_address	Set the column extent.
0x 2B	set_page_address	Set the page extent.
0x 2C	write_memory_start	Transfer image information from the host processor interface to the peripheral starting at the location provided by set_column_address and set_page_address.
0x 2E	read_memory_start	Transfer image data from the peripheral to the host processor interface starting at the location provided by set_column_address and set_page_address.
0x 30	set_partial_area	Defines the partial display area on the display device.
0x 33	set_scroll_area	Defines the vertical scrolling and fixed area on display area.
0x 34	set_tear_off	Synchronization information is not sent from the display module to the host processor.
0x 35	set_tear_on	Synchronization information is sent from the display module to the host processor at the start of VFP.
0x 36	set_address_mode	Set the read order from frame buffer to the display panel.
0x 37	set_scroll_start	Defines the vertical scrolling starting point.
0x 38	exit_idle_mode	Full color depth is used for the display panel.
0x 39	enter_idle_mode	Reduce color depth is used on the display panel.
0x 3A	set_pixel_format	Defines how many bits per pixel are used in the interface.
0x 3C	write_memory_continue	Transfer image information from the host processor interface to the peripheral from the last written location.
0x 3E	read_memory_continue	Read image data from the peripheral continuing after the last read_memory_continue or read_memory_start.
0x 44	set_tear_scanline	Synchronization information is sent from the display module to the host processor when the display device refresh reaches the provided scan line.
0x 45	get_scanline	Get the current scan line.
0x A1	read_ddb	Read the DDB from the provided location.
0x B0	set_lcd_mode_pad_size	Set the LCD panel mode (RGB TFT or TTL).
0x B1	get_lcd_mode_pad_size	Get the current LCD panel mode, pad strength and resolution.
0x B4	set_hori_period	Set front porch.
0x B5	get_hori_period	Get current front porch settings.
0x B6	set_vert_period	Set the vertical blanking interval between last scan line and next LFRAME pulse.
0x B7	get_vert_period	Set the vertical blanking interval between last scan line and next LFRAME pulse.

0x B8	set_gpio_conf	Set the GPIO configuration.
•		If the GPIO is not used for LCD, set the direction.
•		Otherwise, they are toggled with LCD signals.
0x B9	get_gpio_conf	Get the current GPIO configuration.
0x BA	set_gpio_value	Set GPIO value for GPIO configured as output.
0x BB	get_gpio_status	Read current GPIO status.
•		If the individual GPIO was configured as input, the value is the status of the
•		corresponding pin.
1		Otherwise, it is the programmed value.
0x BC	set_post_proc	Set the image post processor.
0x BD	get_post_proc	Set the image post processor.
0x BE	set_pwm_conf	Set the image post processor.
0x BF	get_pwm_conf	Set the image post processor.
0x C0	set_lcd_gen0	Set the rise, fall, period and toggling properties of LCD signal
•		generator 0
0x C1	get_lcd_gen0	Get the current settings of LCD signal generator 0
0x C2	set_lcd_gen1	Set the rise, fall, period and toggling properties of LCD signal generator 1.
0x C3	get_lcd_gen1	Get the current settings of LCD signal generator 1.
0x C4	set_lcd_gen2	Set the rise, fall, period and toggling properties of LCD signal generator 2.
0x C5	get_lcd_gen2	Get the current settings of LCD signal generator 2.
0x C6	set_lcd_gen3	Set the rise, fall, period and toggling properties of LCD signal generator 3.
0x C7	get_lcd_gen3	Get the current settings of LCD signal generator 3.
0x C8	set_gpio0_rop	Set the GPIO0 with respect to the LCD signal generators using ROP3
		operation. No effect if the GPIO0 is configured as general GPIO.
0x C9.	get_gpio0_rop	Get the GPIO0 properties with respect to the LCD signal generators.
0x CA	set_gpio1_rop	Set the GPIO1 with respect to the LCD signal generators using ROP3
		operation. No effect if the GPIO1 is configured as general GPIO.
0x CB	get_gpio1_rop	Get the GPIO1 properties with respect to the LCD signal generators.
0x CC	set_gpio2_rop	Set the GPIO2 with respect to the LCD signal generators using ROP3
		operation. No effect if the GPIO2 is configured as general GPIO.
0x CD	get_gpio2_rop	Get the GPIO2 properties with respect to the LCD signal generators.
0x CE	set_gpio3_rop	Set the GPIO3 with respect to the LCD signal generators using ROP3
		operation. No effect if the GPIO3 is configured as general GPIO.
0x CF	get_gpio3_rop	Get the GPIO3 properties with respect to the LCD signal generators.
0x D0	set_abc_dbc_conf	Set the ambient back light and dynamic back light configuration.
0x D1	get_abc_dbc_conf	Get the ambient back light and current dynamic back light configuration.
0x D4	set_dbc_th	Set the threshold for each level of power saving.
0x D5	get_dbc_th	Get the threshold for each level of power saving.
0x E0	set_pll_start	Start the PLL. Before the start, the system was operated with the crystal
		oscillator or clock input.
0x E2	set_pll_mnk	Set the PLL.
0x E3	get_pll_mnk	Get the PLL settings.
0x E4	get_pll_status	Get the current PLL status.
0x E5	set_deep_sleep	Set deep sleep mode.
0x E6	set_lshift_freq	Set the LSHIFT (pixel clock) frequency.
0x E7	L 1.1.10 C	Cat augment I CHIET (nivel alcale) fraguency setting
	get_lshift_freq	Get current LSHIFT (pixel clock) frequency setting.
0x F0 0x F1	set_pixel_data_interface get_pixel_data_interface	Set the pixel data format of the parallel host processor interface. Get the current pixel data format settings.

About the further detail, please refer the datasheet of SSD1963.

15

9 DISPLAYED COLOR AND INPUT DATA

	Color & Gray								D	ATA S	SIGNA	L							
	Scale	R5	R4	R3	R2	R1	R0	G5	G4	G3	G2	G1	G0	B5	B4	В3	B2	B1	B0
	Black	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Red(63)	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0
	Green(63)	0	0	0	0	0	0	1	1	1	1	1	1	0	0	0	0	0	0
Basic	Blue(63)	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1
Color	Cyan	0	0	0	0	0	0	1	1	1	1	1	1	1	1	1	1	1	1
	Magenta	1	1	1	1	1	1	0	0	0	0	0	0	1	1	1	1	1	1
	Yellow	1	1	1	1	1	1	1	1	1	1	1	1	0	0	0	0	0	0
	White	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1	1
	Black	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Red(1)	0	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0
	Red(2)	0	0	0	0	1	0	0	0	0	0	0	0	0	0	0	0	0	0
Red	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:
Reu	Red(31)	0	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0
	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:
	Red(62)	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0	0
	Red(63)	1	1	1	1	1	1	0	0	0	0	0	0	0	0	0	0	0	0
	Black	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Green(1)	0	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0
	Green(2)	0	0	0	0	0	0	0	0	0	0	1	0	0	0	0	0	0	0
Green	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:	:
Green	Green(31)	0	0	0	0	0	0	0	1	1	1	1	0	0	0	0	0	0	0
	:		••	••	:	••	:	••			••	••	:	••	:	:	••	••	:
	Green(62)	0	0	0	0	0	0	1	1	1	1	1	0	0	0	0	0	0	0
	Green(63)	0	0	0	0	0	0	1	1	1	1	1	1	0	0	0	0	0	0
	Black	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0
	Blue(1)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1
	Blue(2)	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	1	0
Blue	:	:	••		:	••	:		:	::		•	:	•	:	:	••	••	:
Diue	Blue(31)	0	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1
	:	:	••		:	••	:	:	:	:	•	•	:	•	:	:	••	••	:
	Blue(62)	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	0
	Blue(63)	0	0	0	0	0	0	0	0	0	0	0	0	1	1	1	1	1	1

11. RELIABILITY TEST CONDITIONS

Test Item	Test Conditions	Note
High Temperature Operation	70±3°C ,Dry t=240 hrs	
Low Temperature Operation	-20±3°C, Dry t=240 hrs	
High Temperature Storage	80±3°C , Dry t=240 hrs	1,2
Low Temperature Storage	-30±3°C ,Dry t=240 hrs	1,2
Thermal Shock Test	-20°C ~ 25°C ~ 70°C 30 m in. 5 min. 30 min. (1 cycle) Total 100 cycle(Dry)	1,2
Storage Humidity Test	60 °C, Humidity 90%, 240 hrs	1,2
Vibration Test (Packing)	Sweep frequency : 10 ~ 55 ~ 10 Hz/1min Amplitude : 0.75mm Test direction : X.Y.Z/3 axis Duration : 30min/each axis	2

Note 1: Condensation of water is not permitted on the module.

Note 2: The module should be inspected after 1 hour storage in normal conditions (15-35°C, 45-65%RH).

Definitions of life end point:

- Current drain should be smaller than the specific value.
- Function of the module should be maintained.
- Appearance and display quality should not have degraded noticeably.
- Contrast ratio should be greater than 50% of the initial value.

12. USE PRECAUTIONS

12-1 Handling precautions

- (1) The polarizing plate may break easily so be careful when handling it. Do not touch, press or rub it with a hard-material tool like tweezers.
- (2) Do not touch the polarizing plate surface with bare hands so as not to make it dirty. If the surface or other related part of the polarizing plate is dirty, soak a soft cotton cloth or chamois leather in benzine and wipe off with it. Do not use chemical liquids such as acetone, toluene and isopropyl alcohol. Failure to do so may bring chemical reaction phenomena and deteriorations.
- (3) Remove any spit or water immediately. If it is left for hours, the suffered part may deform or decolorize.
- (4) If the LCD element breaks and any LC stuff leaks, do not suck or lick it. Also if LC stuff is stuck on your skin or clothing, wash thoroughly with soap and water immediately.

12-2 Installing precautions

- (1) The PCB has many ICs that may be damaged easily by static electricity. To prevent breaking by static electricity from the human body and clothing, earth the human body properly using the high resistance and discharge static electricity during the operation. In this case, however, the resistance value should be approx. $1M\Omega$ and the resistance should be placed near the human body rather than the ground surface. When the indoor space is dry, static electricity may occur easily so be careful. We recommend the indoor space should be kept with humidity of 60% or more. When a soldering iron or other similar tool is used for assembly, be sure to earth it.
- (2) When installing the module and ICs, do not bend or twist them. Failure to do so may crack LC element and cause circuit failure.
- (3) To protect LC element, especially polarizing plate, use a transparent protective plate (e.g., acrylic plate, glass etc) for the product case.
- (4) Do not use an adhesive like a both-side adhesive tape to make LCD surface (polarizing plate) and product case stick together. Failure to do so may cause the polarizing plate to peel off

12-3 Storage precautions

- (1) Avoid a high temperature and humidity area. Keep the temperature between 0°C and 35°C and also the humidity under 60%.
- (2) Choose the dark spaces where the product is not exposed to direct sunlight or fluorescent light.
- (3) Store the products as they are put in the boxes provided from us or in the same conditions as we recommend.

12-4 Operating precautions

- (1) Do not boost the applied drive voltage abnormally. Failure to do so may break ICs. When applying power voltage, check the electrical features beforehand and be careful. Always turn off the power to the LC module controller before removing or inserting the LC module input connector. If the input connector is removed or inserted while the power is turned on, the LC module internal circuit may break.
- (2) The display response may be late if the operating temperature is under the normal standard, and the display may be out of order if it is above the normal standard. But this is not a failure; this will be restored if it is within the normal standard.
- (3) The LCD contrast varies depending on the visual angle, ambient temperature, power voltage etc. Obtain the optimum contrast by adjusting the LC dive voltage.
- (4) When carrying out the test, do not take the module out of the low-temperature space suddenly. Failure to do so will cause the module condensing, leading to malfunctions.
- (5) Make certain that each signal noise level is within the standard (L level: 0.2Vdd or less and H level: 0.8Vdd or more) even if the module has functioned properly. If it is beyond the standard, the module may often malfunction. In addition, always connect the module when making noise level measurements.
- (6) The CMOS ICs are incorporated in the module and the pull-up and pull-down function is not adopted for the input so avoid putting the input signal open while the power is ON.
- (7) The characteristic of the semiconductor element changes when it is exposed to light emissions, therefore ICs on the LCD may malfunction if they receive light emissions. To prevent these malfunctions, design and assemble ICs so that they are shielded from light emissions.
- (8) Crosstalk occurs because of characteristics of the LCD. In general, crosstalk occurs when the regularized display is maintained. Also, crosstalk is affected by the LC drive voltage. Design the contents of the display, considering crosstalk.

12-5 Other

- (1) Do not disassemble or take the LC module into pieces. The LC modules once disassembled or taken into pieces are not the guarantee articles.
- (2) The residual image may exist if the same display pattern is shown for hours. This residual image, however, disappears when another display pattern is shown or the drive is interrupted and left for a while. But this is not a problem on reliability.
- (3) AMIPRE will provide one year warrantee for all products and three months warrantee for all repairing products.

13. OUTLINE DIMENSION

