




Product Specification

Beck Compact Module SCM15X09-R RGB/DVI

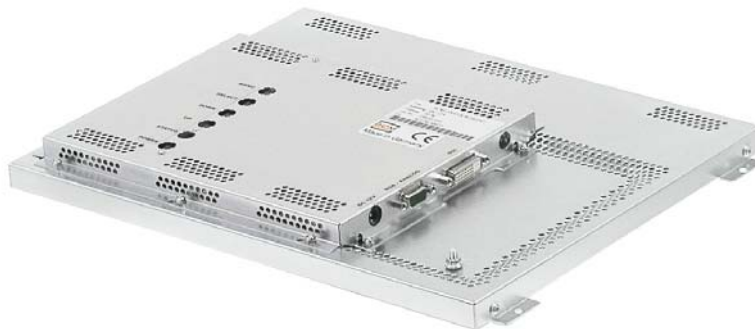

August 2012

Preliminary

The information given in this document is carefully checked and believed to be reliable. However, Beck GmbH & Co. Elektronik Bauelemente KG takes no responsibility for any failure or product damage caused by application of this information. Please check all connections carefully with the product specification.

Products of Beck Elektronik are not intended for use in systems in which failures of product could result in personal injury. All mentioned trademarks are registered trademarks of their owner.

This specification is subject to change without notification.

Beck GmbH & Co. Elektronik
Bauelemente KG
Eltersdorfer Str. 7
90425 Nürnberg
Germany

Tel.: +49 – (0)911 – 9 34 08 – 0
Fax: +49 – (0)911 – 9 34 08 – 28
E-Mail: info@beck-elektronik.de
Internet: www.beck-oled-lcd-tft-display.de

Preliminary
Product Specification
Beck Compact Module
SCM15X09-R



Table of Contents

1. Revision History	3
2. General Description	4
2.1 Product Description	4
2.2 Basic Components	4
2.3 Liability	4
3. General Features	5
4. Electrical Specification	6
4.1 Input Signal Characteristics	6
4.2 Power Supply and Supply Voltage Ripple	6
4.3 Connector Pin Assignment and Description	7
4.3.1 Signal Input Pin Assignment	7
4.3.2 Power Supply Pin Assignment	8
5. Optical Specifications	8
5.1 Optical Characteristics	8-11
5.2 LED Backlight Life	11
6. OSD Adjustment	12
6.1 OSD LED Operating Mode	12
6.2 Key Name and Function	12-13
6.3 Menu Structure	14-15
6.4 Window Structure	16
6.4.1 Color	16
6.4.2 Image Settings	17
6.4.3 Position	18
6.4.4 OSD Menu	19
6.4.5 Language	20
6.4.6 Misc.	21
6.4.7 Exit	22
7. Environmental and Reliability Specification	22-23
8. Mechanical Specifications	23
8.1 Dimensional Requirements	23-24
8.2 Antiglare and Polarizer Hardness	25
9. Handling & Cautions	25
10. Packing Information	26
11. Appendix	26
11.1 Signal Timing Chart	26
11.2 Optional Accessories	26



2. General Description

2.1 Product Description

The Beck Compact Module SCM15X09-R consists of a color active matrix TFT LCD module using amorphous silicon TFT's (Thin Film Transistors) as an active switching device. This module has a 38.1 cm (15.0 inch) diagonally measured active area with XGA resolutions (1024 horizontal by 768 vertical pixel array). Each pixel is divided into RED, GREEN, BLUE dots which are arranged in vertical stripes. This module can display 16,194,227 colors. The TFT-LCD panel used for this module is adapted for a low reflection and higher color type. The Beck Compact Module SCM15X09-R is no complete monitor but a component. Drive peripherals such as interface card, OSD-board, etc. are adapted to the display by a metal covering. The components are tested and tuned to work together perfectly.

2.2 Basic Components

The SCM15X09-R consists of:

Item	Description	Manufacturer
38.1 cm (15,0") Active Matrix TFT LCD	G150XGE-L04	Chi Mei
Interface-Controller	DCMR-40X6C2 TTL/LVDS	Uplusvision
OSD-Board	EPAS-OSD1 SMD LED	Uplusvision

2.3 Liability

Beck Elektronik is not responsible for changes of the components of the Beck Compact Module. This specification is subject to change without notification.

This specification refers to the specifications of the manufacturers of the parts.

If required, Beck Elektronik will send the full specification of the included components.



3. General Features

Item	Description	Remarks
Diagonal	38.1 (15.0")	cm
Active area	304.128 (H) x 228.096 (V)	mm
Resolution – display	1024 x 768	pixel
Resolution – controller	640 x 480 – 1024 x 768	pixel
Pixel pitch	0.297 (H) x 0.297 (V)	mm
Pixel arrangement	RGB vertical stripe	
Display colors	16,2 Mio.	colors
Display mode	Normally White	
Brightness	400	cd/m ²
Contrast ratio	700:1	
Viewing angle	hor.: 80° / 80°, ver.: 70° / 70°	deg.
Response time	25	msec
Interface	Analog-RGB H-Sync. / V-Sync. // DVI	
H-Sync.	31.4 – 80	KHz
V-Sync.	60 – 75	Hz
Power input voltage	12	V DC
Power consumption	15	W
Dimension	347.4 x 255.1 x 29.0	mm
Weight	1,850	gram
RoHS compliance	Yes	



4. Electrical Specification

4.1 Input Signal Characteristics

Description	Signal	Unit	Min	Typical	Max	Notes
RGB Input	Analog RGB	• Vp-p	0	-	0.7	
	Sync	• Vdc	0	-	5.5	
	Horizontal Frequency	• KHz	31.4	-	80	
	Vertical Frequency	• Hz	60	-	75	
DVI Input	Differential Output	• mVp-p	150	-	1200	
	Input clock Frequency	• MHz	25.2	-	136.8	

4.2 Power Supply and Supply Voltage Ripple

Input Signal	Description	Unit	Min	Typical	Max	Remarks
DC Input	DC Voltage	Vdc	11.4	12	12.6	
	Power Consumption	Watts	-	15	-	

- Supply ripple voltage: 100mV



4.3 Connector Pin Assignment and Description

4.3.1 Signal Input Pin Assignment

Analog-RGB Input Connector

Signal Connector: 15 pin HD D-SUB female connector

Group	Pin No.	Symbol	Description
Analog RGB	1	Red	Analog Red
	2	Green	Analog Green
	3	Blue	Analog Blue
	4	ID2	Reserved
	5	GND	Digital GND
	6	RGND	Red Return
	7	GGND	Green Return
	8	BGND	Blue Return
	9	VGA +5V	+5V
	10	SGND	Sync GND
	11	ID0	Reserved
	12	SDA	DDC Serial Data
	13	HSync	Horizontal Sync
	14	VSycn	Vertical Sync
	15	SCL	DDC Data Clock

DVI Input Connector

Signal Connector: DVI-D 24+1pin standard single connector

Group	Pin No.	Symbol	Description	Pin No.	Symbol	Description
DVI	1	RX2-	DVI Data 2-	16	HPD	Hot Plug Detect
	2	RX2+	DVI Data 2+	17	RX0-	DVI Data 0-
	3	GND	2/4 Shield	18	RX0+	DVI Data 0+
	4	NC	DVI Data 4-	19	GND	0/5 Shield
	5	NC	DVI Data 4+	20	NC	DVI Data 5-
	6	SCL	DDC Data Clock	21	NC	DVI Data 5+
	7	SDA	DDC Data	22	GND	Clock Shield
	8	NC	Analog V-Sync	23	RXC+	DVI Clock+
	9	RX1-	DVI Data 1-	24	RXC-	DVI Clock-
	10	RX1+	DVI Data 1+			
	11	GND	1/3 Shield			
	12	NC	DVI Data 3-			
	13	NC	DVI Data 3+			
	14	DVI +5V	+5V			
	15	SYNC GND	Check DVI			



4.3.2 Power Supply Pin Assignment

Power Input Connector

Type: DC Jack

Pin No.	Symbol	Description	Note
1	Vin	12V DC	
2	GND	GND	

5. Optical Specifications

The test of Optical specifications shall be measured in a dark room (ambient luminance ≤ 1 lux and temperature = $25 \pm 2^\circ\text{C}$) with the equipment of Luminance meter system (BM-5A or CA-1000T) and test unit shall be located at an approximate distance 50cm from the LCD surface at a viewing angle of θ and Φ equal to 0° . We refer to $\theta_{\Phi=0}$ ($=\theta_3$) as the 3 o'clock direction (the "right"), $\theta_{\Phi=90}$ ($=\theta_{12}$) as the 12 o'clock direction ("upward"), $\theta_{\Phi=180}$ ($=\theta_9$) as the 9 o'clock direction ("left") and $\theta_{\Phi=270}$ ($=\theta_6$) as the 6 o'clock direction ("bottom"). While scanning θ and/or Φ , the center of the measuring spot on the display surface shall stay fixed. The measurement shall be executed after 30 minutes warm-up period. VDD shall be 3.3V +/- 10% at 25°C . Optimum viewing angle direction is 12 o'clock.



5.1 Optical Characteristics

[VDD=3.3V, Frame rate=60Hz, Clock=54MHz, I_{BL}= 0.73A, Ta = 25±2°C]

Parameter	Symbol	Condition	Min	Typ	Max	Unit	Remarks	
Viewing Angle	Horizontal	Θ ₃	70	80	-	Deg	Note 1	
		Θ ₉	70	80	-	Deg		
	Vertical	Θ ₁₂	60	70	-	Deg		
		Θ ₆	60	70	-	Deg		
	Horizontal	Θ ₃	CR > 5	-	-	-		Deg
		Θ ₉	CR > 5	-	-	-		Deg
	Vertical	Θ ₁₂	CR > 5	-	-	-		Deg
		Θ ₆	CR > 5	-	-	-		Deg
Luminance contrast ratio	CR		450	700	-		Note 2	
Luminance of white	Y _W		300	400	-	cd/m ²	Note 3	
White luminance uniformity	ΔW		-	1.25	1.4	-	Note 4	
Reproduction of color	White	W _x	0.263	0.313	0.363	-	Note 5	
		W _y	0.279	0.329	0.379	-		
	Red	R _x	0.554	0.604	0.654	-		
		R _y	0.306	0.356	0.406	-		
	Green	G _x	0.288	0.338	0.388	-		
		G _y	0.540	0.590	0.640	-		
	Blue	B _x	0.098	0.148	0.198	-		
		B _y	0.048	0.098	0.148	-		
Response time	Tr		-	25	35	-	Note 6	
	Td							

Notes:

- Viewing angle is the angle at which the contrast ratio is greater than 10. The viewing is determined for the horizontal or 3, 9 o'clock direction and the vertical or 6, 12 o'clock direction with respect to the optical axis which is normal to the LCD surface.
- Definition of Contrast ratio (CR):
The contrast ration can be calculated by the following expression.
Contrast ratio (CR) = L₂₅₅/L₀
L₂₅₅: Luminance of gray level 255
L₀: Luminance of gray level 0



Figure 1: Measurement Set Up


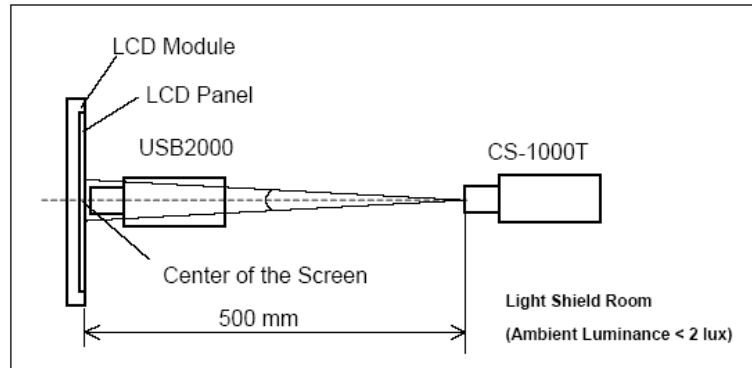


Figure 2: Average Luminance Measurement Locations & Uniformity Measurement Locations

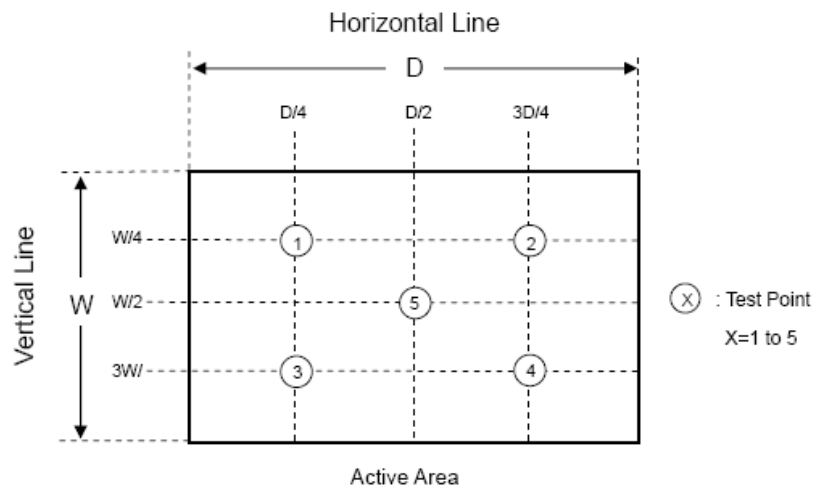


3. Definition of Luminance of White:
Measure the luminance of gray level 255 at center point.
(See FIGURE 2).
4. The White luminance uniformity on LCD surface is then expressed as:
$$\delta_{\text{white}} = \text{Maximum} [L(1), L(2), L(3), L(4), L(5)] / \text{Minimum} [L(1), L(2), L(3), L(4), L(5)]$$

Measure the luminance of gray level 255 at 5 points.
(See FIGURE 2).
5. The color chromaticity coordinates shall be calculated from the spectral data measured with all pixels first in red, green, blue and white. Measurements shall be made at the center of the panel.
6. See FIGURE 3:



Figure 3: Response Time Testing

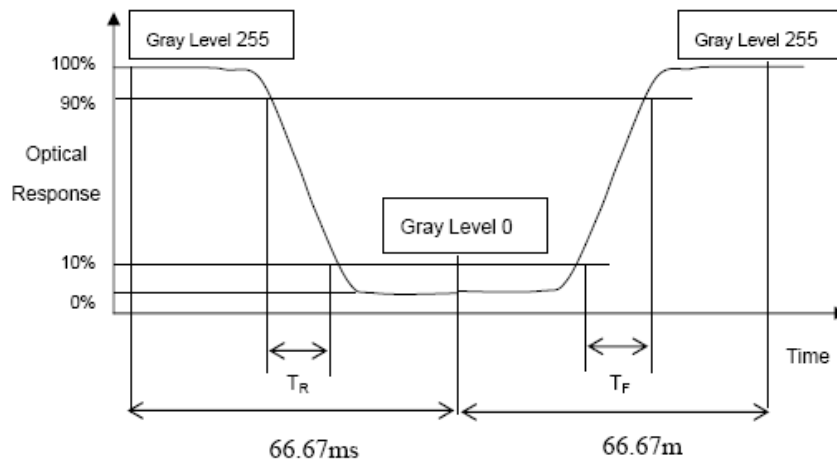

5.2 LED Backlight Life

Parameter	Min	Typ	Max	Unit	Remarks
LED Backlight Life	50.000			hrs	I _{BL} = 0.73 A



6. OSD Adjustment

The Beck Compact Module SCM15X09-R gives a various and very easy graphics interface to its users. Users have easy access to the functions that they want to adjust. Be sure that your system's power and LED are turned on before the OSD controls are being used.

6.1 OSD LED Operating Mode

Power	Signal Input	LED (Red)	LED (Green)
On	Plugged	Off	On
Off	Plugged	Off	Off
On	Unplugged	On	On
Off	Unplugged	Off	Off

6.2 Key Name and Function

No.	Button name	Switch Function
1	Menu	1. First click : Appears the OSD main menu 2. Second click : Exit sub & main menu
2	Select	HOT KEY FOR INPUT SIGNAL SELECTION 1. Select main & sub menu function 2. Confirmation button for selected menu points 3. Back to the sub menu
3	Up(Right)	1. Move up/right main & sub menu 2. Increase selected value
4	Down(Left)	HOT KEY FOR AUTO ADJUSTMENT 1. Move down/left main & sub menu 2. Decrease selected value
SMD-LED	Status	look at 6.1 OSD LED Operating Mode
5	Power	1. Turns ON/OFF the system

Accessing the menu system:

1. With the OSD off, push the **Menu** button to activate the main OSD menu.
2. Use the **Up** and **Down** buttons to move through the main menu. To select a desired sub menu, press the **Select** button after your selection. The selection tabs are highlighted.
3. After selecting sub menu use the **Up** and **Down** buttons to move through the sub menu. To select a setting icon, press the **Select** button after your selection. The selected icons are highlighted.
4. There are two types of icons: some have a single function and must be confirmed with the **Select** button, the other options are setting bars. Once a setting bar appears, it can be increased or decreased via the **Up** and **Down** buttons. The setting bar moves and the numeric value indicator changes to reflect your adjustments.



Note: The numeric value indicator is provided as a point of reference only and has nothing to do with a real measurement.

5. There are different ways to close the OSD menu:

- (a) Waiting some seconds (**timeout**). This time can be adjusted as needed in the sub menu OSD-Menu → OSD-Timer.
- (b) After an auto adjustment and confirmation the OSD menu closes automatically.
- (c) After a factory reset and confirmation the OSD menu closes automatically.
- (d) In the sub menu: Press the **Menu** button two times to leave the sub menu.
- (e) In the main menu: Press the **Menu** button to leave the OSD menu.
- (f) After adjusting a setting, press the **Select** or **Menu** button. Now your selected sub menu is highlighted. Confirm your selection with the **Menu** button to leave the sub menu. This highlights your menu selection in the main menu. Confirm again with the **Menu** button to leave the OSD menu.

6. Auto Adjustment without opening OSD menu:

- Press the **Down** button and an auto adjustment will be done automatically.

7. Input signal selection without opening OSD menu:

- Press the **Select** button and a signal selection will be done automatically.

8. Booting with different input signals

If you boot the BCM device with RGB and DVI parallel, it is possible to change between both input signals. If you boot the BCM device either with RGB or DVI, there will be an automatically signal input detection. Not connected signal inputs will not be recognized. The BCM device identify the connected signal input, otherwise it will go into a sleeping mode. Furthermore, the BCM device search the last input signal, this is recognized as the prior input.

9. Storing of Display settings

If you disconnect the power supply or signal cable, all your previous display settings e.g. brightness, contrast, clock, phase etc. will be stored.

REMARK:


If you use the BCM device with different resolutions, it is necessary to do an auto adjustment in all your operating modes. The different resolution will be stored as well. If you change your operating mode between the different resolutions, the image will be automatically 100% central adjusted.


10. Reset procedure

If you want to have a factory reset, so you have to precede a reset in your entire operating mode. Please do at first a reset on DVI-Side and after that a reset on RGB side. Right after doing it, there should be a message on the screen: "INITIALIZE"/"Auto Adjust..".



6.3 Menu Structure

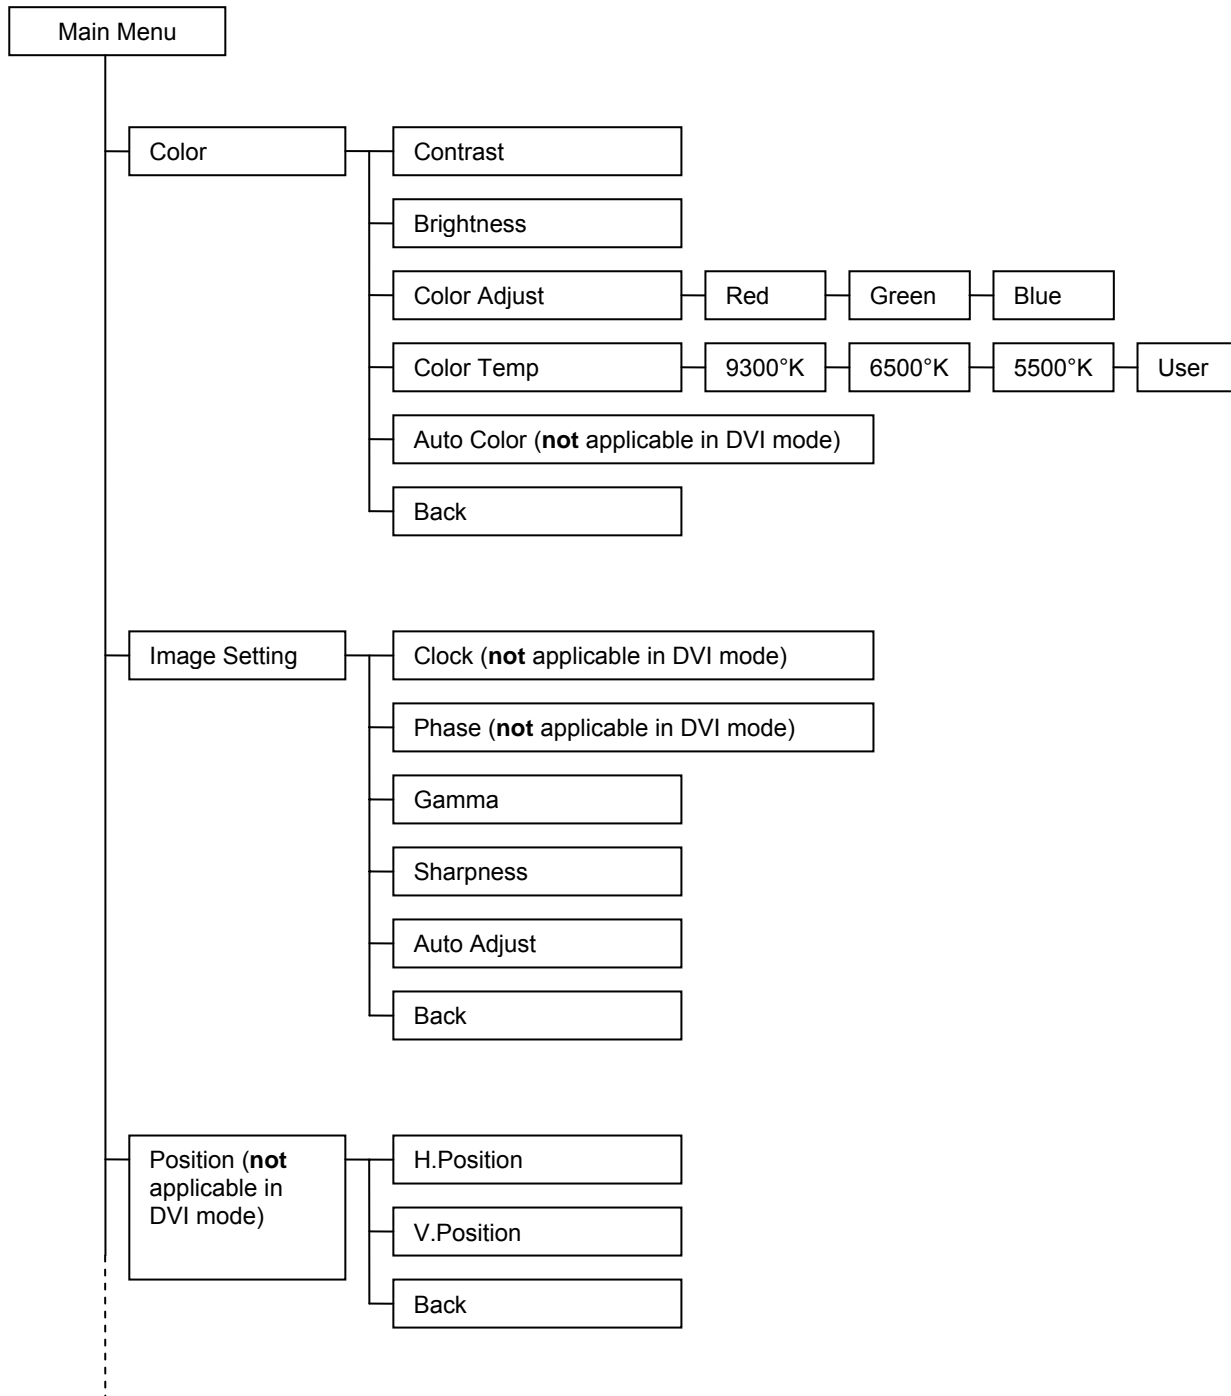

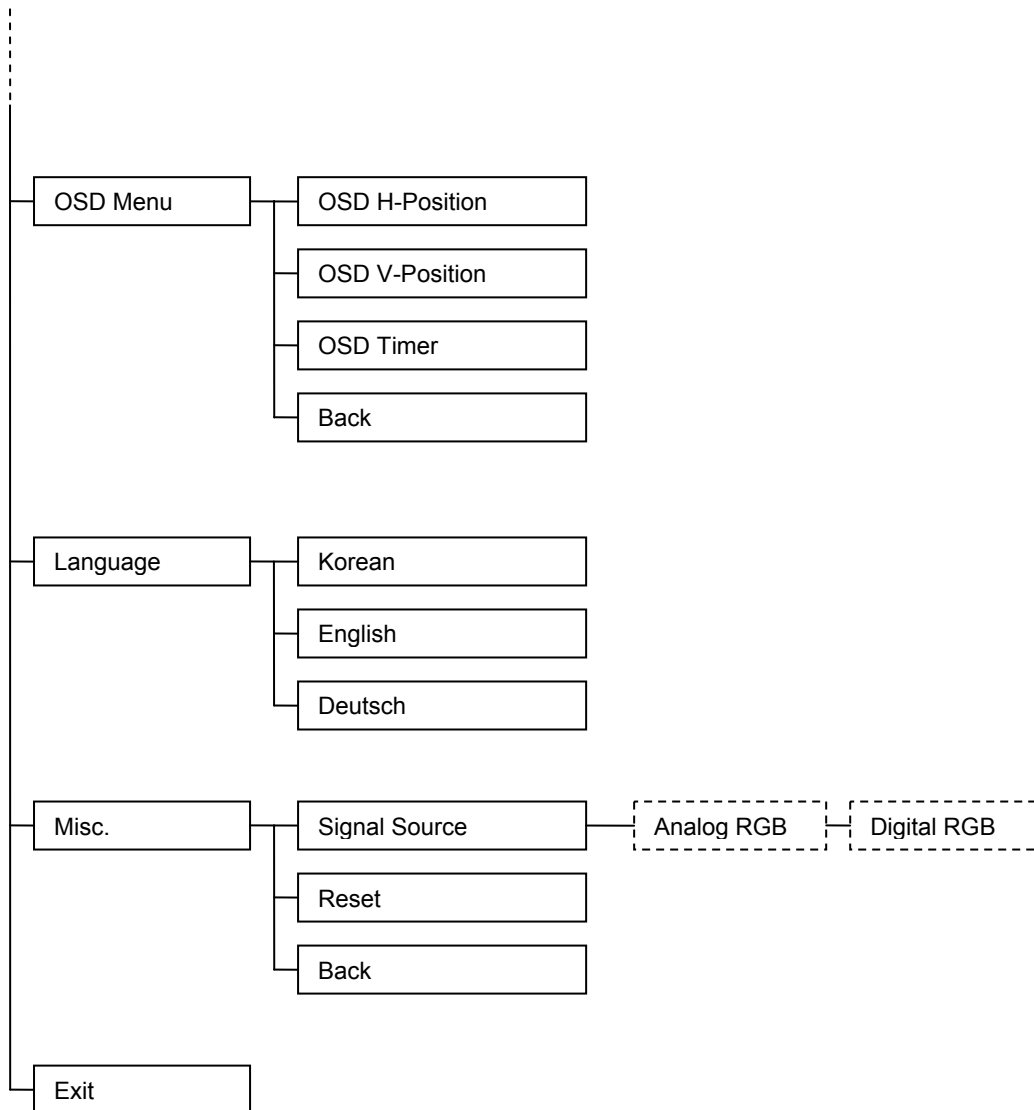





6.4 Window Structure

6.4.1 Color

Main Menu

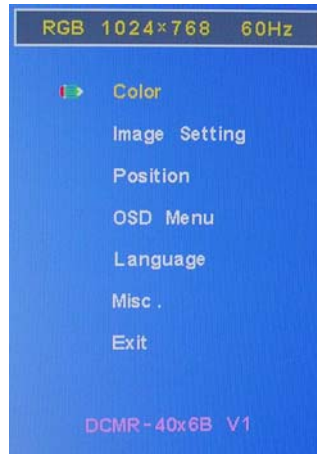

Sub Menu "Color"

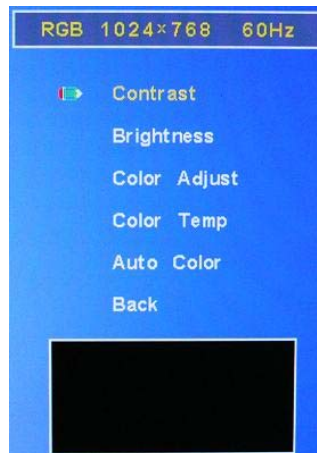


- **Contrast:** Adjusts image contrast.
- **Brightness:** Adjusts displays brightness. Brightness will be regulated using the connected inverter.
- **Color Adjust:** Adjusts image color.
 - **USER:**
 - **RED:** Adjusts red color.
 - **GREEN:** Adjusts green color.
 - **BLUE:** Adjusts blue color.
- **Color Temp.:** Selects different color temperatures (9300°K / 6500°K / 5800°K / USER)
- **Auto color:** Adjusts image color automatically.
- **Back:** You will leave the sub menu back to main menu **OR** press menu button and you will leave the sub menu back to main menu.




6.4.2 Image Setting

Main Menu

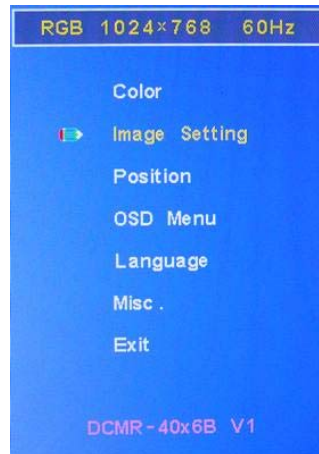

Sub Menu "Image Setting"

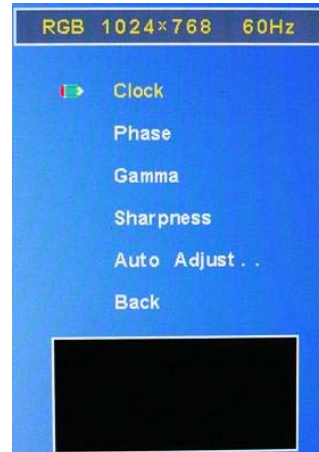

- **Clock:** Adjusts clocks per line (maximum length of line).
- **Phase:** Adjusts image phase.
- **Gamma:** Adjusts image gamma level.
- **Sharpness:** Adjusts image sharpness.
- **Auto Adjust:** Optimizes the displayed image. Adjusts phase and image position automatically (Message on the screen: "Auto Adjust..").
- **Back:** You will leave the sub menu back to main menu **OR** press menu button and you will leave the sub menu back to main menu.




6.4.3 Position

Main Menu



Sub Menu "Position"

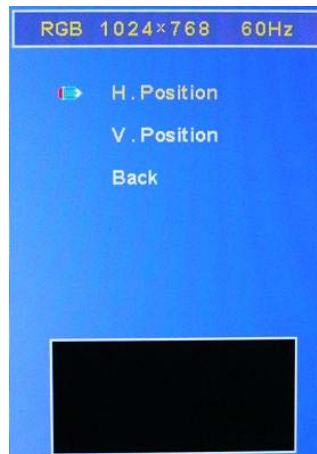

- **H.Position:** Adjusts horizontal image position.
- **V.Position:** Adjusts vertical image position.
- **Back:** You will leave the sub menu back to main menu **OR** press menu button and you will leave the sub menu back to main menu.




6.4.4 OSD Menu

Main Menu



Sub Menu "OSD Menu"

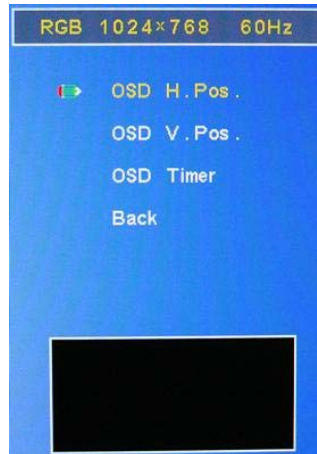


- **OSD Horizontal Position:** Adjusts OSD position horizontally.
- **OSD Vertical Position:** Adjusts OSD position vertically.
- **OSD Timer:** The OSD vanishes after a certain time of inactivity. Values of 5-20s are possible.
- **Back:** You will leave the sub menu back to main menu **OR** press menu button and you will leave the sub menu back to main menu.



6.4.5. Language

Main Menu

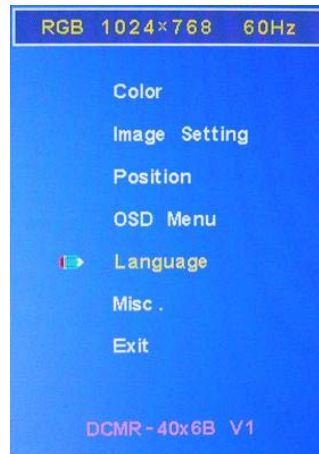

Sub Menu "Language"




- **Language:** Selects your adequate language (Korean, English, Deutsch).



6.4.6 Misc.

Main Menu

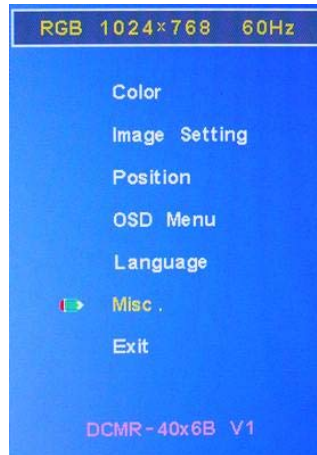

Sub Menu "Misc."




- **Signal Source:** Selects different input signals (either Analog RGB or Digital RGB)
- **Reset:** Restores factory settings (Message on the screen: "INITIALIZE") – **PLEASE FOLLOW THE ADVICE ON PAGE 13 Point 10 "Reset procedure"**.
- **Back:** You will leave the sub menu back to main menu **OR** press menu button and you will leave the sub menu back to main menu.



6.4.7 Exit

Main Menu

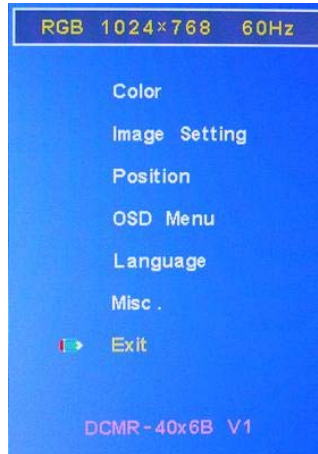

- **Exit:** Leaves the OSD-Menu

7. Environmental and Reliability Specification

The Reliability items and its conditions are shown in below.

No.	Items	Conditions	Note
1	Temperature (operating)	0 – 50 °C	1
2	Temperature (non-operating)	-40 °C – 85 °C	
3	Humidity (operating)	90 % RH, 240 hours	
4	Vibration test (non operating)	Frequency: 10 ~ 300 Hz sine wave, 10 min/cycle Gravity/AMP: 1.5G Period: ±X, ±Y, ±Z 10min	
5	Shock test (non operating)	Gravity: 50G Pulse width: 11ms, half sine wave ±X, ±Y, ±Z Once for each direction	

Note:

1. It is the user responsibility to keep this temperature within the above specification.



- The Beck Compact Module is no independent final product. Therefore Beck Elektronik is not obliged to fulfil directives of EC Declaration of Conformity.
- The customer is responsible for certification of the end device.
- Independent from that for customers' support Beck Elektronik declares that the product complies with the requirements of the following European directive(s):

EMC Directive No.: 2004/108/EG

The compliance of the product with the requirements of this directive(s) was proved by the application of the following standards:

EN 55022:2006 +A1:2007 Information Technology Equipment – Radio Disturbance Characteristics – Limits and methods of Measurement

EN 55024:1998 +A1:2001 +A2:2003 Information Technology Equipment – Immunity Characteristics – Limits and methods of Measurement

- If you need the official EC Declaration of Conformity please contact Beck GmbH & Co. Elektronik Bauelemente KG

• 8. Mechanical Specifications

8.1 Dimensional Requirements


Figure 1 shows mechanical outlines for the model SCM15X09-R. Other parameters are shown in the below-mentioned table.

Dimensional Parameters

Parameter		Specification	Unit
Dimensional outline	Horizontal	347.4 +/- 0.5	mm
	Vertical	255.1 +/- 0.5	
	Thickness	29.0 +/- 0.5	
Weight		1,850	gram
Active Area		304.128 (H) x 228.096 (V)	mm
Pixel pitch		0.297 (H) x 0.297 (V)	mm
Number of pixels		1024 (H) x 768 (V) (1 pixel = R+G+B dot)	pixel
Back light		LED backlight unit	



Figure 1: Mechanical Outlines

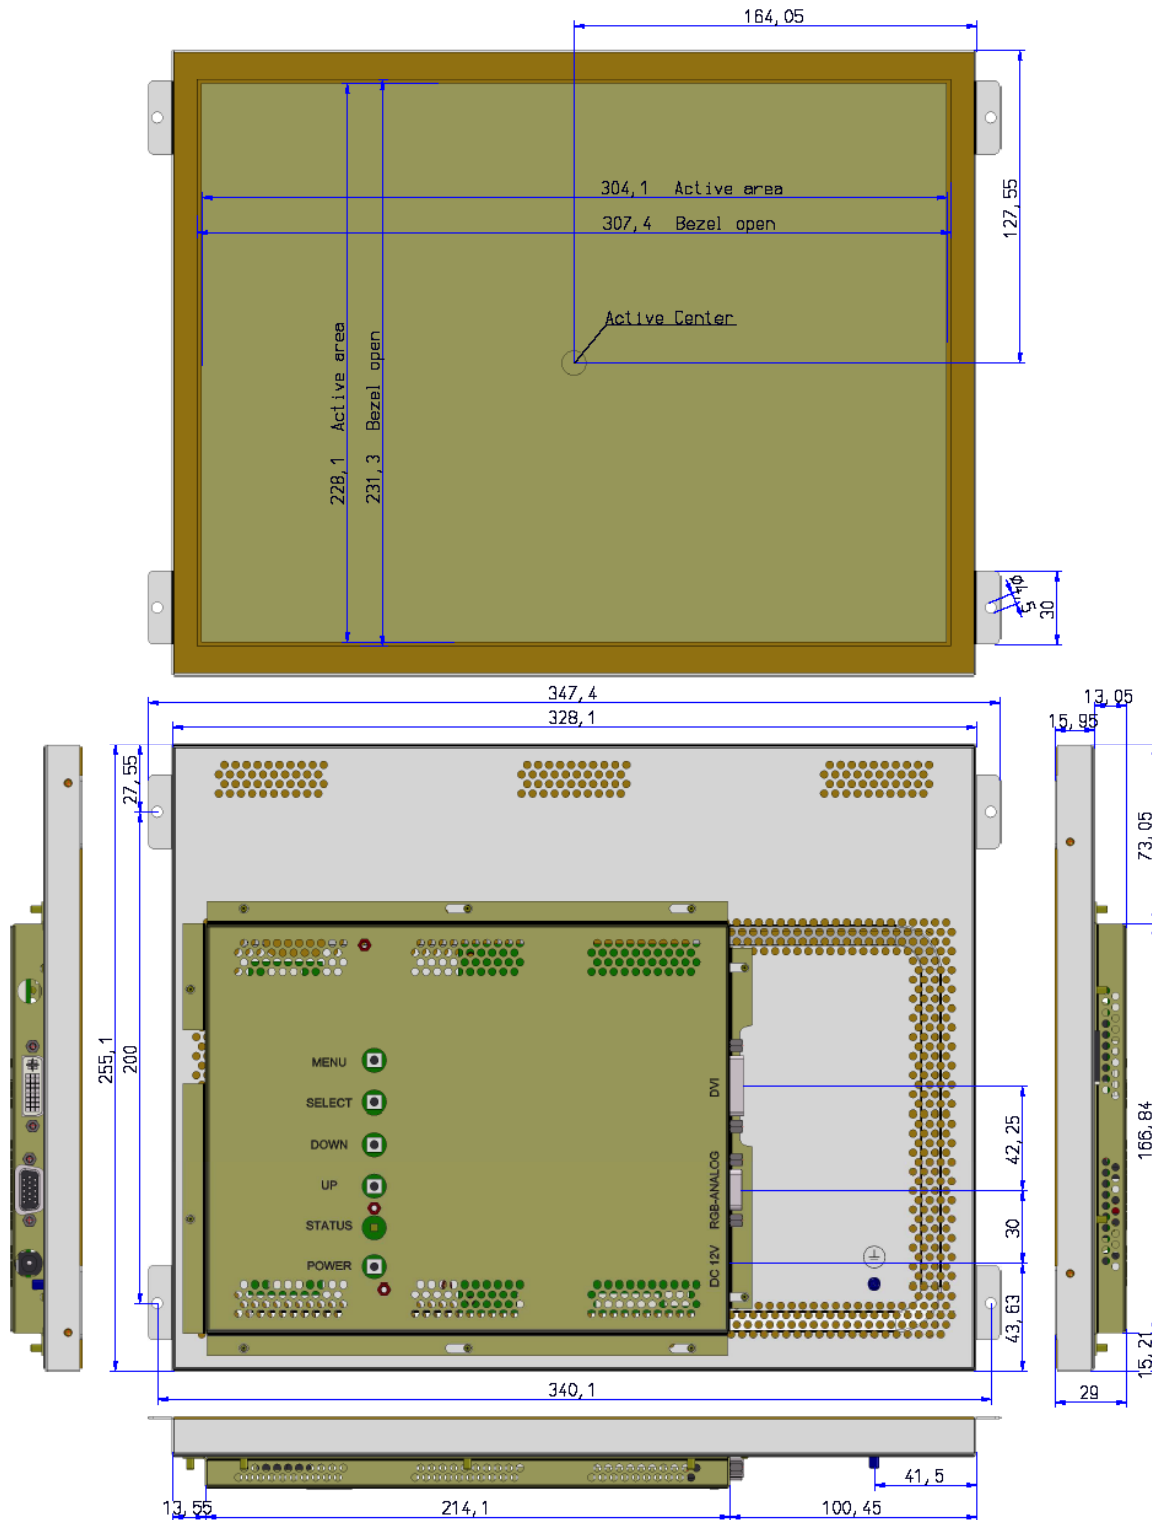



8.2 Anti-Glare and Polarizer Hardness

The surface of the LCD has an anti-glare coating to minimize reflection and a coating to reduce scratching.

9. Handling & Cautions

Cautions when taking out the module

- Pick the pouch only, when taking out module from a shipping package.

Cautions for handling the module

- As the electrostatic discharges may break the LCD module, handle the LCD module with care. Peel a protection sheet off from the LCD panel surface as slowly as possible.
- As the LCD panel and backlight element are made from fragile glass material, impulse and pressure to the LCD module should be avoided.
- As the surface of the polarizer is very soft and easily scratched, use a soft dry-cloth without chemicals for cleaning.
- Put the module display side down on a flat horizontal plane.
- Handle connectors and cables with care.

Cautions for the atmosphere

- Dewdrop atmosphere should be avoided.
- Do not store and/or operate the LCD module in a high temperature and/or humidity atmosphere. Storage in an electro-conductive polymer-packing pouch and under relatively low temperature atmosphere is recommended.

Cautions for the module characteristics


- Do not apply fixed pattern data signal to the LCD module at aging time.
- Applying fixed pattern for a long time may cause image sticking.

Other cautions

- Do not disassemble and/or re-assemble LCD module.
- Do not re-adjust variable resistor or switch etc.
- When returning the module for repair or etc, please pack the module not to be broken. We recommend on using the original shipping packages.

REMARK:

We recommend the grounding of Beck Compact Module with your device. For this purpose, there is a PE connection point placed on the back side of the module.

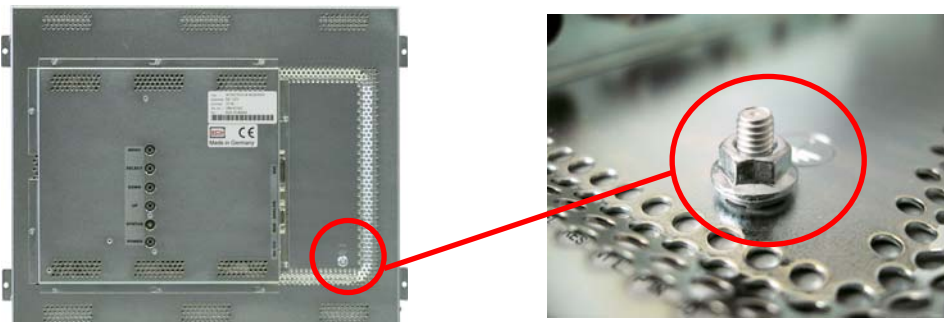



10. Packing Information

Each of the five SCM15X09-R is packed into an anti-static foil.
These five units of SCM15X09-R are packed into a carton filled and cushioned with shock absorbing styrofoam and therefore very good protected for shipping.

11. Appendix

11.1 Signal Timing Chart Analog RGB / DVI

Standard	Resolution	Refresh	f_{HSYNC}	Pixel Rate
		Rate (Hz)	(KHz)	(MHz)
VGA	640 x 350	70	31.4	25.2
	720 x 400	70	31.4	28.3
	640 x 480	60	31.5	25.2
		70	35.0	28.6
		72	37.8	31.5
75		37.5	31.5	
SVGA	800 x 600	60	37.9	40.0
		70	43.8	45.5
		72	48.1	50.0
		75	46.9	49.5
XGA	1024 x 768	60	48.4	65.0
		70	56.5	75.0
		72	57.7	75.2
		75	60.0	78.8

11.2 Optional Accessories

We refer to our webpage:

<http://beck-oled-lcd-tft-display.de/index.php?id=bcm-standard-line>

We offer a wide variety of optional accessories to operate the SCM15X09-R.